


Mudflaps rear RENAULT Sandero Stepway, 2010->

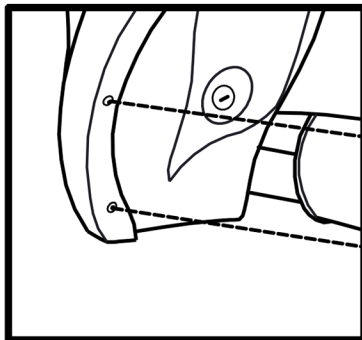


Preparation

2x  - Original screw

Installation

2x  - Original screw

1x  - Screw $\varnothing 4,2 \times 16 \text{mm}$

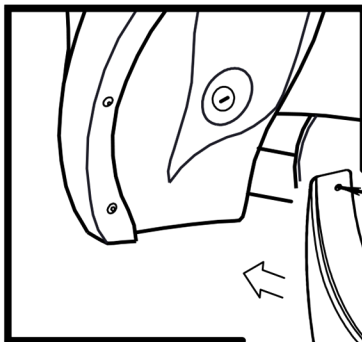

Art.: EXP.NLF.41.28.E11

Set package

Mudflap - 2pcs.; Screw $\varnothing 4,2 \times 16 \text{mm}$ - 2pcs.